

# PRO-VISION

## Video Systems


### Magnetic Roof Mount Kit (P-1057): Installation Instructions

#### General Installation Note:

- It is suggested that the monitor be positioned in-line between the drivers head and the passenger side A-pillar.
- The monitor should be located no less than 24" from the drivers head. The monitor should be close enough for the average height driver to reach the monitor but far enough away they will not hit it with their head during an accident.

#### Specific Installation Instructions:

1. Drop the headliner.
2. Use 80 grit sandpaper (included) to remove paint, etc. from the roof at the desired location. After sanding, clean the entire mounting location with alcohol pads (included).
3. Liberally apply JB Weld (included) only to the flat mounting surfaces of the magnetic bracket support (see photo).

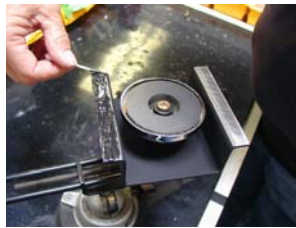

4. Install complete bracket (magnet & support) and allow JB Weld to cure a minimum of ½ hour. **DO NOT HANG THE MONITOR AT THIS STEP!**
5. During the curing period, install the camera, video cable, and power harness. The reverse gear power lead must be connected for auto on / auto channel switching function to be utilized. Conceal wiring in the cab as much as possible to eliminate damage issues and to provide a professional installation appearance.
6. After the JB weld has cured, push the headliner up against the ¼" stud – this will mark the spot to drill a 9/32 diameter hole in the headliner.
7. Reinstall the headliner. The mounting stud will be the only part that sticks through the headliner.
8. Install the u-shaped monitor mounting bracket to the stud. (Nylon Washer / U-Shaped Bracket / Nylon Washer / Metal Washer / Lock Nut) Ensure the u-shaped bracket will swivel.
9. Install the monitor in the u-shaped bracket.